NX1□

# NX1 series machine controller


#### Compact in size, powerful in functionality

The NX1 completes the NX/NJ machine controllers family offering same functionality in a compact design. The NX1 provides synchronized control of all machine devices such as motion, I/O, safety and vision under one Integrated Development Environment.

- Fastest cycle time: 2 ms
- Functions: Logic sequence and Motion control
- Up to 8 axes (4 synchronized axes)
- Built-in I/O: 40 or 24 I/O points
- Up to 8 local NX I/O units
- · Built-in EtherCAT and EtherNet/IP ports
- Up to 16 EtherCAT slaves
- Up to 2 option boards can be connected to add serial communications or analog I/O functionality



## System configuration

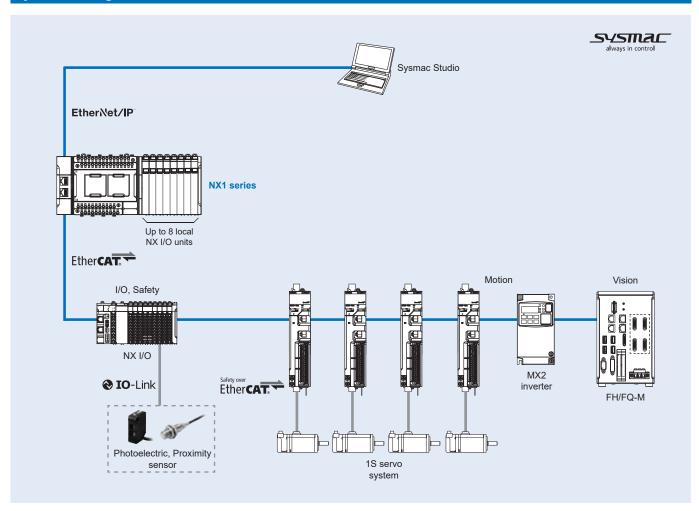



## **Specifications**

#### **General specifications**

Item		NX1□ CPU Unit
Enclosure		Mounted in a panel
Grounding		Less than 100 $\Omega$
Operation environment	Ambient operating temperature	0 to 55°C
	Ambient operating humidity	10% to 95% (with non condensation)
	Atmosphere	Must be free from corrosive gases
	Ambient storage temperature	-25 to 70°C (excluding battery)
	Altitude	2,000 m or less
	Pollution degree	2 or less: Conforms to JIS B3502 and IEC 61131-2.
	Noise immunity	2 kV on power supply line (conforms to IEC 61000-4-4.)
	Overvoltage category	Category II: Conforms to JIS B3502 and IEC 61131-2
	EMC immunity level	Zone B
	Vibration resistance	Conforms to IEC 60068-2-6 5 to 8.4 Hz with 3.5 mm amplitude, 8.4 to 150 Hz. Acceleration of 9.8 m/s <sup>2</sup> for 100 min in X, Y and Z directions (10 sweeps of 10 min each = 100 min total)
	Shock resistance	Conforms to IEC 60068-2-27 147 m/s <sup>2</sup> , 3 times in X, Y and Z directions
Battery	Life	5 years at 25°C
	Model	CJ1W-BAT01 (sold separately)
Applicable standards	EU Directives	EN 61131-2
	cULus	Listed UL 61010-2-201 and ANSI/ISA 12.12.01
	Others	KC

#### **Electrical and mechanical specifications**

Item I		NX1P2-1□40DT□	NX1P2-9024DT		
<b>CPU</b> unit dimensions	$(H \times D \times W)$	100 mm × 71 mm × 154 mm	100 mm × 71 mm × 130 mm		
Weight		660 g (including end cover)	590 g (including end cover)		
CPU unit power	Power supply voltage	24 VDC (20.4 to 28.8 VDC)			
supply	Unit power consumption	NX1P2-1□40DT: 7.05 W NX1P2-1□40DT1: 6.85 W	NX1P2-9024DT: 6.70 W NX1P2-9024DT1: 6.40 W		
	Inrush current <sup>*1</sup>	For cold start at room temperature: 10 A max./0.1	ms max. and 2.5 A max./150 ms max.		
	Current capacity of power supply terminal*2	4 A max.			
	Isolation method	No isolation between the unit power supply terminal and internal circuit			
NX unit power supply	Capacity	10 W max.			
	Efficiency	80%			
Isolation method		No isolation between the unit power supply terminal and NX unit power supply			
I/O power supply to N	IX units	Not provided 3			
External connection terminals	Communications connector	RJ45 for EtherNet/IP communications x 1 RJ45 for EtherCAT communications x 1			
Screwless push-in terminal block Output terminal (service supply)		For unit power supply input, grounding and input signal x 1 (removable) For output signal x 1 (removable)			
		Not provided			
	Run output terminal	Not provided			
	NX bus connector	8 NX I/O units can be connected			
	No. of option board slots	2	1		

<sup>\*1.</sup> The inrush current may vary depending on the operating conditions and other conditions. Therefore, select fuses, breakers and external power supply devices that have enough margin in characteristic and capacity, considering the condition under which the devices are used.

52

The amount of current that can be passed constantly through the terminal. Do not exceed this current value when you use a through-wiring for the unit power supply

<sup>\*3.</sup> When the type of the I/O power supply to NX units you use is the supply from NX bus, an additional I/O power supply unit is required. The maximum I/O power supply current from an additional I/O power supply unit is 4 A.



## Performance specifications

Item	specification			NV1D2-11/0DT	NX1P2-1040DT□	NX1P2-9024DT□
Processing time	Instruction	LD instruction		NX1P2-1140DT□ 3.3 ns	NV 145-1040D1□	NA 172-9024D1□
riocessing time	execution		instructions	70 ns or more		
	time		ong real data)	70 lis of filore		
Programming	Program	Size		1.5 MB		
	capacity*1		definitions	450		
			nstances	1.800		
	Memory		tain attribute	Size: 2 MB		
	capacity for			Number of variables: 90,000		
	variables*2	Retair	n attribute	Size: 32 KB		
				Number of variables: 5,000		
	Data type	Numb	er	1,000		
	Memory for	CIO a	rea	0 to 6,144 channel (0 to 6,143)	*3	
	CJ-Series	Work	area	0 to 512 channel (W0 to W511)	),3	
	units (can be	Holdi	ng area	0 to 1,536 channel (H0 to H1,5	35) <sup>*4</sup>	
	specified with AT specifica-	DM ar		0 to 16,000 channel (D0 to F15	i,999)* <sup>4</sup>	
	tions for vari-	EM ar	ea	-		
	ables.)					
Unit configuration	Maximum number of connectable	units	num number of NX I/O that can be mounted to X1 CPU unit	8 units		
	units		num number of NX I/O	24 units		
			for entire controller	(8 units on CPU rack + 16 units		
	Power supply	Mode			r DC input is built into the CPU	unit
			r OFF detection time	2 to 8 ms		
Motion control	Number of controlled axes		er of controlled axes	12 axes (8 motion control axes + 4 sin- gle-axis position control axes)	10 axes (6 motion control axes + 4 sin- gle-axis position control axes)	4 axes (4 single-axis position control axes)
			er of used real axes	8 axes (4 motion control servo axes + 4 single-axis position control servo axes)	6 axes (2 motion control servo axes + 4 single-axis position control servo axes)	4 axes (4 single-axis position control servo axes)
			r interpolation control	4 axes max. per axes group		-
			lar interpolation control	2 axes per axes group		-
	Number of axe	s grou	ps	8 groups max.		-
	Position units			Pulses, millimeters, micrometer	rs, nanometers, degrees or inch	es
	Override factor	rs		0.00% or 0.01% to 500.00%		
	Motion control			Same as the period for primary		
	Cams		per of cam data points	65,535 points max. per cam tal 262,140 points max. for all cam 80 tables max.		-
Communications	Built-in		er of ports	1		<u> </u>
Communications	EtherNet/IP		cal layer	10BASE-T, 100BASE-TX		
	port	•	e length	1,514 bytes max.		
			access method	CSMA/CD		
		Modu		Baseband		
		Topol	ogy	Star		
		Baud	•	100 Mbps (100BASE-TX)		
			mission media		ble of Ethernet category 5, 5e o	r higher
		Trans	mission distance			3 -
			ade connections number	100 m max. (distance between Ethernet switch and node)  There are no restrictions if an switching hub is used		
			Number of connections	32	<u> </u>	
		'	Packet Interval <sup>*5</sup>	2 to 10,000 ms in 1-ms increme	ents	
				Can be set for each connection	1.	
		]	Permissible	3,000 pps*6 (including heartbeat	at)	
		s)	communications band			
		ää	Number of tag sets	32 max.		
		lata :ati	Tag types	Network variables, CIO/WR/HF		
		CIP service: Tag data links (cyclic communications)	Number of tags per connection (i.e., per tag set)	8 (7 tags if controller status is in	ncluded in the tag set.)	
		<u>5</u> 5	Number of tags	256 max.		
		P serv	Link data size per node (total size for all tags)	19,200 bytes max.		
		ಶ್	Data size per connection			
		sets		32 max. (1 connection = 1 tag set)		
		]	Tag set size	600 bytes max. (two bytes are	used if controller status is includ	led in the tag set.)
		Multi-cast packet filter*7		Supported.		- · ·
		service: sages	Class 3 (number of connections)	32 (clients plus server)		
		CIP message service Explicit messages	UCMM (non-connection type)	Number of clients that can com Number of servers that can cor	nmunicate at one time: 32 max. nmunicate at one time: 32 max.	
			per of TCP socket service	30 max.		



Item			NX1P2-1140DT□	NX1P2-1040DT□	NX1P2-9024DT□	
Communications			IEC 61158, Type 12			
	EtherCAT port	EtherCAT master specifications	Class B (feature pack motion control compliant)			
	Physical layer		100BASE-TX			
		Modulation	Baseband			
		Baud rate	100 Mbps (100BASE-TX)			
		Duplex mode	Automatic			
		Topology	Line, daisy chain and branchir	ıg		
		Transmission media	Twisted-pair cable of category and braiding)	5 or higher (double-shielded str	raight cable with aluminum tape	
		Transmission distance	Distance between nodes: 100	m max.		
		Number of slaves	16 max.			
		Range of node addresses	1 to 192			
	Process data size Process data size per slave		Inputs/Outputs: 1,434 bytes max. (However, the maximum number of process data frames is 1)			
			Inputs/Outputs: 1,434 bytes m	ax.		
		Communications cycle	2,000 μs to 8,000 μs in 250-μs increments			
		Sync jitter	1 μs max.			
		Communications method	Half duplex			
	nications <sup>*8</sup>	Synchronization	Start-stop			
		Baud rate	1.2/2.4/4.8/9.6/19.2/38.4/57.6/	115.2 kbps		
		Transmission distance	Depends on the option board			
		Supported protocol	Host link, Modbus-RTU maste	r and no-protocol		
	Number of slot		2		1	
Built-in I/O	•	· · · · · · · · · · · · · · · · · · ·	24		14	
Output	Number of outputs	16		10		
			NPN models: Not provided PNP models: Provided			
	Accuracy		At ambient temperature of 25° At ambient temperature of 0°C			
	Retention time	of built-in capacitor	At ambient temperature of 40°	C: 10 days		

<sup>\*1.</sup> This is the capacity for the execution objects and variable tables (including variable names).

#### Serial communications option board specifications

Item	NX1W-CIF01	NX1W-CIF11	NX1W-CIF12
Communications port	1 x RS-232C	1 x RS-422A/485	1 x RS-422A/485 (isolated)
Communications method	Half-duplex		
Synchronization method	Start-stop synchronization		
Baud rate	1.2/2.4/4.8/9.6/19.2/38.4/57.6/1	15.2 kbps	
Transmission distance	15 m	50 m	500 m
Supported protocol	Host link, Modbus-RTU master	and no-protocol	
		Screwless push-in terminals 5 terminals	
Applicable wire size	AWG28 to 20	AWG24 to 20	
Dimensions (H × D × W)	35.9 mm x 13.5 mm x 35.9 mm		
Weight	16 g	13 g	14 g
Power consumption	The option board power consur	mption is included in the CPU ur	nit power consumption.
Isolation method	No isolation		Isolation*1

<sup>\*1.</sup> The terminals are isolated from the internal circuits of the CPU unit.

#### Analog I/O option board specifications

Item		NX1W-ADB21	NX1W-DAB21V	NX1W-MAB221	
I/O	Туре	Analog input	Analog output	Analog I/O	
	Voltage/current input	0 to 10 V	-	0 to 10 V	
		0 to 20 mA		0 to 20 mA	
		2 words total		2 words total	
	Voltage output	-	0 to 10 V	0 to 10 V	
			2 words	2 words	
Terminal block	type	Screwless push-in terminals 5 terminals	Screwless push-in terminals 3 terminals	Screwless push-in terminals 8 terminals	
Applicable wir	e size	AWG24 to 20	AWG24 to 20		
Dimensions (H	× D × W)	35.9 mm x 28.2 mm x 35.9 m	35.9 mm x 28.2 mm x 35.9 mm		
Weight		24 g	24 g 26 g		
Power consumption		The option board power cons	The option board power consumption is included in the CPU unit power consumption.		
Isolation meth	od	No isolation	No isolation		

<sup>\*2.</sup> Memory used for CJ series units is included.

<sup>3.</sup> The value can be set in 1 ch increments. The value is included in the total size of variables without a retain attribute.

<sup>\*4.</sup> The value can be set in 1 ch increments. The value is included in the total size of variables with a retain attribute.

<sup>\*5.</sup> Data will be refreshed at the set interval, regardless of the number of nodes.

<sup>\*6.</sup> Means packets per second, i.e., the number of communication packets that can be sent or received in one second.

<sup>7.</sup> As the EtherNet/IP port implements the IGMP client, unnecessary multi-cast packets can be filtered by using an Ethernet switch that supports IGMP Snooping.

<sup>\*8.</sup> Supported only with the Serial communications option board.



## **Function specifications**

Item				NX1□ CPU Unit
Tasks	Function	Function		I/O refreshing and the user program are executed in units that are called tasks.
				Tasks are used to specify execution conditions and execution priority.
		Periodically exe	ecuted tasks	Maximum number of primary periodic tasks: 1 Maximum number of periodic tasks: 2
		Conditionally ex	xecuted tasks	Maximum number of even tasks: 32 When active even task instruction is executed or when condition expression for variable is met
	Setup	System service	monitoring	Not supported
Drogram:	POUS	settings		POLIs that are assigned to tasks
Programming	POUs (program	Programs Function blocks	<u> </u>	POUs that are assigned to tasks.  POUs that are used to create objects with specific conditions.
	organization	Function blocks	<u>-</u>	POUs that are used to create objects with specific conditions.  POUs that are used to create an object that determine unique outputs for the inputs, such as
	units)			for data processing.
	Programming languages	Types	<u> </u>	Ladder diagrams 1 and structured text (ST).
	Namespaces	<u>.                                    </u>		A concept that is used to group identifiers for POU definitions.
	Variables	External access	s of variables	Network variables (the function which allows access from the HMI, host computers or other controllers)
	Data types	Basic data type	es	BOOL, BYTE, WORD, DWORD, LWORD, INT, SINT, DINT, LINT, UINT, USINT, UDINT, ULINT, REAL, LREAL, TIME (durations), DATE, TIME_OF_DAY, DATE_AND_TIME and STRING (text strings)
		Derivative data	types	Structures, unions, enumerations
		Structures	Function	A derivative data type that groups together data with different variable types.  Number of members: 2,048 max.  Nesting levels: 8 max.
		ĺ	Member data types	Basic data types, structures, unions, enumerations, array variables
			Specifying member offsets	You can use member offsets to place structure members at any memory locations.
		Unions	Function	A derivative data type that groups together data with different variable types.  Number of members: 4 max.
			Member data	BOOL, BYTE, WORD, DWORD and LWORD.
		Enumerations	types Function	A derivative data type that uses text strings called enumerators to express variable values.
	Data type	Array	Function	An array is a group of elements with the same data type. You specify the number (subscript) of
	attributes	specifications		Number of dimensions: 3 max.  Number of elements: 65,535 max.
	1	1	Array	Supported.
			specifications for FB instances	
		Range specifica		You can specify a range for a data type in advance. The data type can take only values that
				are in the specified range.
		Libraries		User libraries.
Motion control*2	Control modes			Position control, velocity control, torque control
CONTROL	Axis types	an ho mana '		Servo axes, virtual servo axes, encoder axes and virtual encoder axes
	Positions that c	Single-axis	Absolute	Command positions and actual positions  Positioning is performed for a target position that is specified with an absolute value.
	g.v unio	position contol	positioning Relative	Positioning is performed for a target position that is specified with an absolute value.  Positioning is performed for a specified travel distance from the command current position.
			positioning Interrupt	Positioning is performed for a specified travel distance from the position where an interrupt
			feeding	input was received from an external input.
			Cyclic synchro- nous absolute positioning	A positioning command is output each control period in the position control mode.
		Single-axis	Velocity control	Velocity control is performed in position control mode.
		velocity control	Cyclic synchronous	A velocity command is output each control period in the velocity control mode.
		Single-axis	velocity control Torque control	The torque of the motor is controlled.
		torque control Single-axis	Starting cam	A cam motion is performed using the specified cam table.
		synchronized control	operation Ending cam	The cam motion for the axis that is specified with the input parameter is ended.
		ĺ	operation Starting gear	A gear motion with the specified gear ratio is performed between a master axis and slave axis.
			operation Positioning gear	A gear motion with the specified gear ratio and sync position is performed between a master
			operation	axis and slave axis.
			Ending gear operation	The specified gear motion or positioning gear motion is ended.
			Synchronous positioning	Positioning is performed in sync with a specified master axis.
			Master axis phase shift	The phase of a master axis in synchronized control is shifted.
			Combining axes	The command positions of two axes are added or subtracted and the result is output as the command position.
		Single-axis manual	Powering the servo	The servo in the servo drive is turned ON to enable axis motion.
		operation	Jogging	An axis is jogged at a specified target velocity.

## OMRON

Item				NX1□ CPU Unit
Motion control*2	Single-axis	Auxiliary	Resetting axis	Axes errors are cleared.
control -		functions for single-axis control	errors Homing	A motor is operated and the limit signals, home proximity signal, and home signal are used to define home.
			Homing with parameters	The parameters are specified, the motor is operated and the limit signals, home proximity signal and home signal are used to define home.
			High-speed	Positioning is performed for an absolute target position of 0 to return to home.
			homing Stopping	An axis is decelerated to a stop at the specified rate.
			Immediately stopping	An axis is stopped immediately.
			Override factors	The target velocity of an axis can be changed.
			Changing the	The command current position or actual current position of an axis can be changed to any
			current position Enabling	position. The position of an axis is recorded when a trigger occurs.
			external latches Disabling	The current latch is disabled.
			external latches Zone monitoring	You can monitor the command position or actual position of an axis to see when it is within a
			Enabling digital	specified range (zone). You can turn a digital output ON and OFF according to the position of an axis.
			cam switches  Monitoring axis	
			following error	You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.
			Resetting the following error	The error between the command current position and actual current position is set to 0.
			Torque limit	The torque control function of the servo drive can be enabled or disabled and the torque limits can be set to control the output torque.
			Position compensation	The function which compensate the position for the axis in operation.
			Start velocity	You can set the initial velocity when axis motion starts.
	Axes groups	Multi-axes	Absolute linear	Linear interpolation is performed to a specified absolute position.
		,	interpolation Relative linear interpolation	Linear interpolation is performed to a specified relative position.
			Circular 2D interpolation	Circular interpolation is performed for two axes.
			Axes group cy- clic synchro-	A positioning command is output each control period in Position control mode.
			nous absolute positioning	
		Auxiliary functions for	Resetting axes group errors	Axes group errors and axis errors are cleared.
		multi-axes coordinated control	Enabling axes groups	Motion of an axes group is enabled.
			Disabling axes groups	Motion of an axes group is disabled.
			Stopping axes groups	All axes in interpolated motion are decelerated to a stop.
			Immediately stopping axes groups	All axes in interpolated motion are stopped immediately.
			Setting axes group override factors	The blended target velocity is changed during interpolated motion.
			Reading axes group positions	The command current positions and actual current positions of an axes group can be read.
			Changing the axes in a group	The composition axes parameter in the axes group parameters can be overwritten temporarily.
	Common items	Cams	Setting cam table properties	The end point index of the cam table that is specified in the input parameter is changed.
			Saving cam tables	The cam table that is specified with the input parameter is saved in non-volatile memory in the CPU unit.
			Generating cam tables	The cam table that is specified with the input parameter is generated from the cam property and cam mode.
		Parameters	Writing MC settings	Some of the axis parameters or axes group parameters are overwritten temporarily.
			Changing axis parameters	You can access and change the axis parameters from the user program.
	Auxiliary	Count modes	1	You can select either linear mode (finite length) or rotary mode (infinite length).
ļ	functions	Unit conversion		You can set the display unit for each axis according to the machine.
		Acceleration/ deceleration control	Automatic acceleration/ deceleration control	Jerk is set for the acceleration/deceleration curve for an axis motion or axes group motion.
			Changing the acceleration and deceleration rates	You can change the acceleration or deceleration rate even during acceleration or deceleration.
		In-position che	ck	You can set an in-position range and in-position check time to confirm when positioning is completed.
		Stop method		You can set the stop method to the immediate stop input signal or limit input signal.

56 Machine automation controller



Item				NX1□ CPU Unit
Motion	Auxiliary		f motion control	You can change the input variables for a motion control instruction during execution and
control*2	functions	instructions Multi-execution	of motion	execute the instruction again to change the target values during operation.  You can specify when to start execution and how to connect the velocities between operations
		trol instruction		when another motion control instruction is executed during operation.
		Continuous axes group motions		You can specify the transition mode for multi-execution of instructions for axes group operation
		(transition mode)  Monitoring Software limits		Software limits are set for each axis.
		functions	Following error	The error between the command current value and the actual current value is monitored for an
				axis.
			Velocity, accel- eration/decelera-	You can set and monitor warning values for each axis and each axes group.
			interpolation velocity and interpolation acceleration/deceleration rate	
		Absolute encod		You can use an OMRON 1S series servomotor or Accurax-G5 series servomotor with an absolute encoder to eliminate the need to perform homing at startup.
		Input signal log	ic inversion	You can inverse the logic of immediate stop input signal, positive limit input signal, negative limit input signal or home proximity input signal.
	External interfa	ce signals		The servo drive input signals listed below are used: Home signal, home proximity signal, positive limit signal, negative limit signal, immediate stop signal and interrupt input signal.
Unit (I/O) management	EtherCAT slaves	Number of slav	es	16 max.
	CJ-series units	Number of unit	s	Not supported
Communica-	EtherNet/IP	Communication		TCP/IP, UDP/IP
tions	port	CIP communi- cations service	Tag data links	Programless cyclic data exchange is performed with the devices on the EtherNet/IP network.
		cations service	message communications	CIP commands are sent to or received from the devices on the EtherNet/IP network.
		TCP/IP	Socket services	Data is sent to and received from any node on Ethernet using the UDP or TCP protocol.
			FTP client	Socket communications instructions are used.  Files are transferred via FTP from the CPU unit to computers or controllers at other Ethernet nodes. FTP client communications instructions are used.
			FTP server	Files can be read from or written to the SD memory card in the CPU unit from computers at other Ethernet nodes.
			Automatic clock adjustment	Clock information is read from the NTP server at the specified time or at specified interval after the power supply to the CPU unit is turned ON. The internal clock time in the CPU unit is
			SNMP agent	updated with the read time.  Built-in EtherNet/IP port internal status information is provided to network management
	EtherCAT port	Supported	Process data	software that uses an SNMP manager.  A communication method to exchange control information in cyclic communications between
		services	communications SDO	
			communications	
		Network scann	ing	Information is read from connected slave devices and the slave configuration is automatically generated.
		DC (distributed	clock)	Time is synchronized by sharing the EtherCAT system time between all EtherCAT devices (including the master).
		_		The frames that are sent by the master and the frames that are received by the master can be saved. The data that is saved can be viewed with WireShark or other applications.
				The slaves can be enabled or disabled as communications targets.
		Disconnecting/	connecting	Temporarily disconnects a slave from the EtherCAT network for maintenance, such as for re-
		Supported application	СоЕ	placement of the slave and then connects the slave again.  SDO messages of the CAN application can be sent to slaves via EtherCAT.
	Serial	protocol Protocol		Host link (FINS), no-protocol and Modbus-RTU master (when connected to the Serial commu-
	communication			nications option board)
	Communication	is instructions		The following instructions are supported: FTP client instructions, CIP communications instructions, socket communications instructions, SDO message instructions, no-protocol communications instructions and Modbus RTU protocol instructions.
Operation management	RUN output cor	ntacts		Not supported.
System	Event logs	Function		Events are recorded in the logs.
management		Number of ever	nts per event log	System event log: 576 max.**  Access event log: 528 max.*4
Debugging	Online editing			User-defined event log: 512 max.  Programs, function blocks, functions and global variables can be changed online. More than one operator can change POUs individually via network.
	Forced	Forced refreshi	ng	The user can force specific variables to TRUE or FALSE.
	refreshing	Number of forced	For EtherCAT slaves	64 max.
		variables	For CJ-series	Not supported.
	MC test Run Synchronization	n		Motor operation and wiring can be checked from the Sysmac Studio.  The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online.
1	Differentiation	Differentiation	monitoring	You can monitor when a variable changes to TRUE or changes to FALSE.
	monitoring Number of contacts			8 max.

## **OMRON**

Item				NX1 CPU Unit
	Data tur di d	T	Oin alla taite est e	
Debugging	Data tracing	Types	Single triggered trace	When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically.
			Continuous trace	Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
		Number of simultaneous data trace		2 max.
		Number of reco	ords	10,000 max.
		Sampling	Number of sam-	48 variables max.
			pled variables	
		Timing of samp		Sampling is performed for the specified task period, at the specified time or when a sampling instruction is executed.
		Triggered	Triggered traces	Trigger conditions are set to record data before and after an event.
		traces	Trigger conditions	When BOOL variable changes to TRUE or FALSE. Comparison of non-BOOL variable with a constant. Comparison method: Equals (=), greater than (>), greater than or equals ( $\geq$ ), less than (<), less than or equals ( $\leq$ ), not equal ( $\neq$ ).
			Delay	Trigger position setting: A slider is used to set the percentage of sampling before and after the trigger condition is met.
	Simulation	I		The operation of the CPU unit is emulated in the Sysmac Studio.
Reliability	Self-diagnosis	Controller	Levels	Major faults, partial faults, minor faults, observation and information.
_		errors	Number of mes- sage languages	9 max. (Sysmac Studio) 2 max. (NS-series PT
		User-defined	Function	User-defined errors are registered in advance and then records are created by executing in-
		errors	T dilotion	structions.
			Levels	8 levels
			Number of mes- sage languages	9 max.
Security	Protecting	CPU unit name	s and serial IDs	When going online to a CPU unit from the Sysmac Studio, the CPU unit name in the project is
<b>_</b>	software assets			compared to the name of the CPU unit being connected to.
	and preventing operating mistakes	ti ri ii C p	User program transfer with no restoration information	You can prevent reading data in the CPU unit from the Sysmac Studio.
			CPU unit write protection	You can prevent writing data to the CPU unit from the Sysmac Studio or SD memory card.
			Overall project file protection	You can use passwords to protect .smc files from unauthorized opening on the Sysmac Studio
			Data protection	You can use passwords to protect POUs on the Sysmac Studio.
		Verification of operation authority	Verification of operation authority	Online operations can be restricted by operation rights to prevent damage to equipment or injuries that may be caused by operating mistakes.
			Number of groups	5
		Verification of user program execution ID		The user program cannot be executed without entering a user program execution ID from the Sysmac Studio for the specific hardware (CPU unit).
SD memory	Storage type	·		SD memory card, SDHC memory card
card	Application	Automatic trans	sfer from SD	When the power supply to the controller is turned ON, the data that is stored in the autoload directory of the SD memory card is transferred to the controller.
		Program transf memory card	er from SD	With the specification of the system-defined variable, you can transfer a program that is stored in the SD memory card to the controller.
		SD memory car	d operation	You can access SD memory cards from instructions in the user program.
			from the Sysmac	You can perform file operations for Controller files in the SD memory card and read/write standard document files on the computer.
		SD memory car detection	d life expiration	Notification of the expiration of the life of the SD memory card is provided in a system-defined variable and event log.
Backup	SD memory card backup	Operating methods	CPU unit front panel DIP switch	Backup, verification and restoration operations are performed by manipulating the front-panel
			Specification with system-de- fined variables	Backup and verification operations are performed by manipulating system-defined variables.
			SD memory card Window in Sysmac Studio	Backup and verification operations are performed from the SD memory card Window of the Sysmac Studio.
			Special instruction	The special instruction is used to backup data.
		Protection	Disabling backups to SD	Backing up data to a SD memory card is prohibited.
			memory cards	
Sysmac Studio	controller backu	ps	The Sysmac Studio is used to backup, restore and verify controller data.	


<sup>\*1.</sup> Inline ST is supported (Inline ST is ST that is written as an element in a ladder diagram).
\*2. The NX1P2-9□ CPU unit doesn't support motion control.
\*3. This is the total of 512 events for the CPU unit and 64 events for the NX unit.

<sup>\*4.</sup> This is the total of 512 events for the CPU unit and 16 events for the NX unit.

## Terminal block


## Input terminal block

#### **NX1P2-1**□40**DT**□

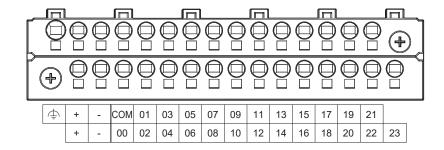

Symbol	Name	Description
<u></u>	Functional ground terminal	Connect the ground wire to the terminal
+/-	Unit power supply terminals	These terminals are connected to the unit power supply The + and - terminals are internally connected to each other
COM	Common terminal	Common terminal for the input circuits
00 to 15	Input terminals	General-purpose input A
16 to 23		General-purpose input B

#### NX1P2-9024DT

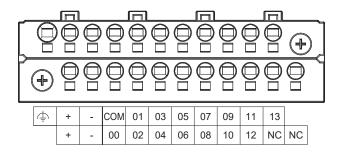

Symbol	Name	Description
Ţ	Functional ground terminal	Connect the ground wire to the terminal
+/-	Unit power supply terminals	These terminals are connected to the unit power supply The + and - terminals are internally connected to each other
COM	Common terminal	Common terminal for the input circuits
00 to 13	Input terminals	General-purpose input A
NC	NC	Do not connect anything

#### Input specifications

Item	General-purpose input A	General-purpose input B			
	NX1P2-1 40DT : 00 to 15	NX1P2-1□40DT□: 16 to 23			
	NX1P2-9024DT□: 00 to 13				
Internal I/O common	For both NPN/PNP				
Input voltage	24 VDC (15 to 28.8 VDC)				
Input current	5.8 mA typical	5.3 mA typical			
Input impedance	4.0 kΩ	4.3 kΩ			
Connected sensor	Two-wire or three-wire sensors				
ON voltage	15 VDC min.				
OFF voltage/current	5 VDC max./1 mA max.				
ON/OFF response time*1	2.5 μs max.	1 ms max.			
ON/OFF filter time*2	No filter, 0.25 ms, 0.5 ms, 1 ms (default), 2 ms, 4 ms, 8 ms, 1	6 ms, 32 ms, 64 ms, 128 ms, 256 ms			
Circuit configuration	Input indicator  15 (13)  4.0 kΩ  Input indicator  4.0 kΩ  Internal circuits  COM	Input indicator  23 4.3 kΩ  Internal circuits			


<sup>1.</sup> These values are the fixed response time needed by the hardware. A value from 0 to 32 ms (default: 1 ms) that is set on the Support Software is added to these values.

<sup>\*2.</sup> Set the filter time for every 4 points.

#### Output terminal block

The appearance of the terminal block is the same for all the NX1 CPU models.

#### NX1P2-1 ☐ 40DT

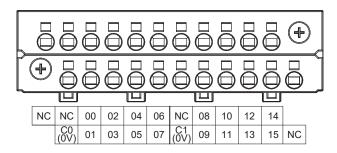

Symbol	Name	Description
C0 (0 V), C1 (0 V)		Connected to the 0 V side of the I/O power supply C0 (0 V) and C1 (0 V) are independent from each other inside the CPU unit
00 to 15	Output terminals	NPN (sinking) type output
NC	NC	Do not connect anything

#### NX1P2-1 □ 40DT1

NO	; (+V)	00	02	04	06	C1 (+V)	08	10	12	14	
	0V0	01	03	05	07	0V1	09	11	13	15	NC

Symbol	Name	Description
C0 (+V), C1 (+V)		Connected to the 24 V side of the I/O power supply
		C0 (+V) and C1 (+V) are independent from each other inside the CPU unit
0V0, 0V1		Supplies 0 V for the internal circuits for driving
		0V0 and 0V1 are independent from each other inside the CPU unit
00 to 15	Output terminals	PNP (sourcing) type output with the load short-circuit protection function
NC	NC	Do not connect anything

## NX1P2-9024DT

NC	NC	00	02	04	06	08	NC	NC	NC	NC	
	C0 (0V)	01	03	05	07	09	NC	NC	NC	NC	NC

Symbol	Name	Description
C0 (0 V)	Common terminal	Connected to the 0 V side of the I/O power supply
00 to 09	Output terminals	NPN (sinking) type output
NC	NC	Do not connect anything

#### NX1P2-9024DT1

NC	C0 (+V)	00	02	04	06	08	NC	NC	NC	NC	
	0V0	01	03	05	07	09	NC	NC	NC	NC	NC

Symbol	Name	Description			
C0 (+V)	Common terminal	Connected to the 24 V side of the I/O power supply			
0V0	0 V terminal	Supplies 0 V for the internal circuits for driving			
00 to 09	Output terminals	PNP (sourcing) type output with the load short-circuit protection function			
NC	NC	Do not connect anything			

60



## **Output specifications**

Item	NX1P2-□□□ <b>DT</b>	NX1P2-□□□ <b>DT</b> 1
Internal I/O common	NPN (sinking)	PNP (sourcing)
Maximum switching capacity	12 to 24 VDC (10.2 to 28.8 VDC), 300 mA per point	24 VDC (15 to 28.8 VDC), 300 mA per point
	NX1P2-1□40DT□: 1.8 A/common (3.6 A/unit) NX1P2-9024DT□: 2.4 A/common (2.4 A/unit)	
Minimum switching capacity	12 to 24 VDC (10.2 to 28.8 VDC), 1 mA	24 VDC (15 to 28.8 VDC), 1 mA
Leakage current	0.1 mA max.	
Residual voltage	1.5 V max.	
ON response time	0.1 ms max.	0.5 ms max.
OFF response time	0.8 ms max.	1.0 ms max.
Current consumption from I/O power supply*1	-	NX1P2-1□40DT1: 40 mA/common NX1P2-9024DT1: 50 mA/common
Load short-circuit protection	Not provided	Provided <sup>*2</sup>
Circuit configuration	NX1P2-1□40DT	NX1P2-1□40DT1
	Output indicator  15  15  108  17  17  18  18  18  18  18  18  18  1	Output indicator  Output indicator  C1 (+V)  T0 (00 (+V)  O0 (00 (+V)
	Output indicator  Output indic	Output indicator  Output indicator  Output indicator  CO (+V)  Output indicator  CO (+V)  Output indicator  Output indic


The internally consumed current from I/O power supply. The current flows from the common terminal Cn (+V) to the 0Vn terminal. The current consumption of any external load is excluded.


The load short-circuit protection is provided for each point of the PNP (sourcing) type output terminal. It protects the output circuits when a load short circuit

## Nomenclature


#### **NX1 CPU unit**

#### NX1P2-1 □ 40DT □

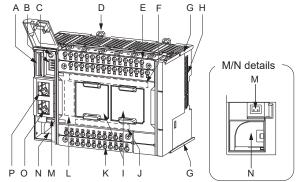

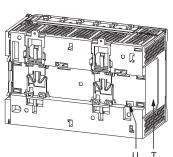


#### NX1P2-9024DT□

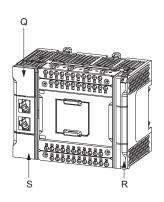

Symbol	Name	Description
Α	SD memory card connector	Connects the SD memory card to the CPU unit.
В	DIP switch	Use in Safe Mode <sup>-1</sup> or when backing up data. Normally, turn OFF all the pins.
С	SD memory card power supply switch	Turns OFF the power supply so that you can remove the SD memory card.
D	DIN track mounting hook	These hooks are used to mount the unit to a DIN track.
Е	Input terminal block	This terminal block is used for wiring for the unit power supply, grounding and build-in input.
F	Input indicator	Shows the operation status of the built-in input.
G	Unit hookup guides	These guides are used to mount an NX unit or End cover.
Н	NX bus connector	This connector is used to connect the CPU unit to the NX unit on the right of the CPU unit.
I	Option board slot 1 (left) Option board slot 2 (right)	Remove the covers of the slots and mount option boards. For the models with 24 built-in I/O points, only one slot is provided. Keep the removed covers in a safe place.
J	Output indicator	Shows the operation status of the built-in output.
K	Output terminal block	This terminal block is used to wire the build-in output.
L	CPU unit operation status indicator	Shows the operation status of the CPU unit.
М	Battery connector	Connector to mount the backup battery that is sold separately.
N	Battery slot	Used to mount the backup battery that is sold separately.
0	Built-in EtherCAT port	Connects the built-in EtherCAT with an Ethernet cable.
Р	Built-in EtherNet/IP port	Connects the built-in EtherNet/IP with an Ethernet cable.
Q	SD memory card cover	Cover for the SD memory card and DIP switch. The cover swings upward.
R	End cover	Cover to protect the CPU unit and NX I/O units.
S	Battery cover	Cover for battery slot. Remove this cover when you mount/remove the battery.
T	ID information indication	Shows the ID information of the CPU unit.
U	DIN track contact plate	This plate is connected internally to the functional ground terminal on the terminal block.

 
<sup>\*1.</sup> To use Safe Mode, set the DIP switch as shown in the below picture and then turn ON the power supply to the controller. If the power supply to the controller is turned ON with the CPU unit in Safe Mode, the CPU unit will start in PROGRAM mode. Use the Safe Mode if you do not want to execute the user program when the power supply is turned ON or if it is difficult to connect the Sysmac Studio.




62


## **Dimensions**


## NX1 CPU unit (NX1P2-1 40DT)

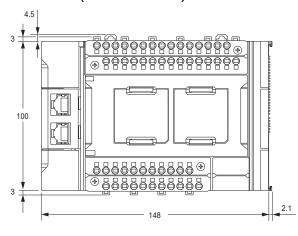

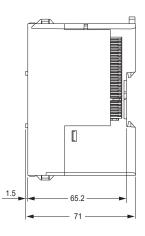


## NX1 CPU unit (NX1P2-9024DT□)

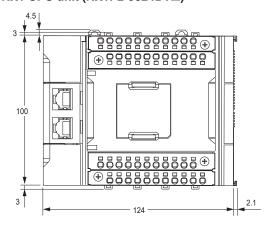

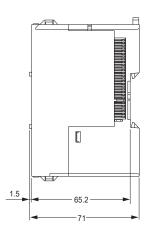

## End cover (NX-END02)

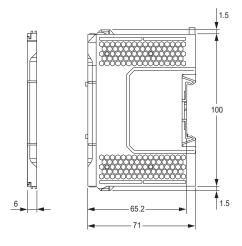



## **Ordering information**

#### **NX1 series CPU units**

		Memory capacity	Number of	f axes		Built-in I/C	) points		Model	Appearance
	capacity	for variables	Real axes	Motion control servo axes	Single-axis position control servo axes		Input points	Output points		
NX1	1.5 MB	32 KB (retained during power	8 axes	4 axes	4 axes	40 points	24 points	16 points NPN transistor	NX1P2-1140DT	
		interruptions) or 2 MB (not retained						16 points PNP transistor*1	NX1P2-1140DT1	1
		during power interruptions)	6 axes	2 axes				16 points NPN transistor	NX1P2-1040DT	
								16 points PNP transistor*1	NX1P2-1040DT1	
			4 axes	0 axes		24 points	14 points	10 points NPN transistor	NX1P2-9024DT	(minus)
								10 points PNP transistor*1	NX1P2-9024DT1	7-1

<sup>\*1.</sup> With the load short-circuit protection.

Note: The end cover unit NX-END02 is included with the CPU unit.

#### **Option boards**

Туре	Specifications	Supported protocol	Model	Appearance
Serial communications	1 x RS-232C port Transmission distance: 15 m Connection type: Screwless push-in terminal block (9 terminals)	NX1W-CIF01	ener	
	1 x RS-422A/485 port Transmission distance: 50 m Connection type: Screwless push-in terminal block (5 terminals)		NX1W-CIF11	
	1 x RS-422A/485 port (isolated) Transmission distance: 500 m Connection type: Screwless push-in terminal block (5 terminals)		NX1W-CIF12	
Analog I/O	2 x Analog input Voltage input: 0 to 10 V (Resolution: 1/4,000) Current input: 0 to 20 mA (1/2,000) Connection type: Screwless push-in terminal block (5 terminals)		NX1W-ADB21	
	2 x Analog output Voltage output: 0 to 10 V (Resolution: 1/4,000) Connection type: Screwless push-in terminal block (3 terminals)	NX1W-DAB21V		
	2 x Analog input / 2 x Analog output  Voltage input: 0 to 10 V (Resolution: 1/4,000)  Current input: 0 to 20 mA (1/2,000)  Voltage output: 0 to 10 V (Resolution: 1/4,000)  Connection type: Screwless push-in terminal block (8 terminals)		NX1W-MAB221	12.45

#### NX I/O units (local and remote I/O)

Up to 8 local NX I/O units can be connected to an NX1 CPU unit. The NX-Safety units must be used in combination with the EtherCAT communication coupler unit.

## **EtherCAT** communication coupler

Туре		Communications cycle in DC mode*1	Specifications	Connection	I/O power supply	Width	Model
Communication	EtherCAT slave	125 to 10,000 μs	Up to 63 I/O units	2 RJ45 ports	10.0 A max.	46 mm	NX-ECC203
coupler		·	Max. 1024 bytes in + 1024 bytes out	(in + out)			
			Supports distributed clock				

 $<sup>^{\</sup>star 1.}$  This depends on the specifications of the EtherCAT master and the unit configuration.

#### **IO-Link master**

Туре	No. of ports	I/O refresh method	Connection type <sup>*1</sup>	Width	Model
IO-Link master	4	Free run	Screwless push-in (NX-TBA162)	12 mm	NX-ILM400

<sup>\*1.</sup> Units with Screwless push-in connections are supplied with the appropriate terminal connector.



## Digital I/O

Туре	Channels, signal type	Performance*1, I/O refresh method	Connection type <sup>*2</sup>	Width	Model	NPN type*3
DC digital input	4 inputs, 3-wire connection	High-speed synchronous time stamp	Screwless push-in (NX-TBA122)	12 mm	NX-ID3444	NX-ID3344
		High-speed synchronous/free run	Screwless push-in (NX-TBA122)	12 mm	NX-ID3443	NX-ID3343
		Synchronous/free run	Screwless push-in (NX-TBA122)	12 mm	NX-ID3417	NX-ID3317
	8 inputs, 2-wire connection		Screwless push-in (NX-TBA162)	12 mm	NX-ID4442	NX-ID4342
	16 inputs, 1-wire connection		Screwless push-in (NX-TBA162)	12 mm	NX-ID5442	NX-ID5342
			M3 screw terminal block	30 mm	NX-ID5142-1	NX-ID5142-1
			1 x 20-pin MIL connector	30 mm	NX-ID5142-5	NX-ID5142-5
	32 inputs, 1-wire connection		1 x 40-pin MIL connector	30 mm	NX-ID6142-5	NX-ID6142-5
			1 x 40-pin Fujitsu connector	30 mm	NX-ID6142-6	NX-ID6142-6
AC digital input	4 inputs, 200-240 VAC, 50/60 Hz	Free run	Screwless push-in (NX-TBA082)	12 mm	NX-IA3117	-
DC digital	2 outputs 0.5 A, 3-wire connection	High-speed synchronous time stamp	Screwless push-in (NX-TBA082)	12 mm	NX-OD2258	NX-OD2154
output	4 outputs 0.5 A, 3-wire connection	High-speed synchronous/free run	Screwless push-in (NX-TBA122)	12 mm	NX-OD3257	NX-OD3153
		Synchronous/free run	Screwless push-in (NX-TBA122)	12 mm	NX-OD3256	NX-OD3121
	4 outputs 2 A, 3-wire connection		Screwless push-in (NX-TBA162)	12 mm	NX-OD3268	-
	8 outputs 0.5 A, 2-wire connection		Screwless push-in (NX-TBA162)	12 mm	NX-OD4256	NX-OD4121
	16 outputs 0.5 A, 1-wire connection		Screwless push-in (NX-TBA162)	12 mm	NX-OD5256	NX-OD5121
			M3 screw terminal block	30 mm	NX-OD5256-1	NX-OD5121-1
			1 x 20-pin MIL connector	30 mm	NX-OD5256-5	NX-OD5121-5
	32 outputs 0.5 A, 1-wire connection		1 x 40-pin MIL connector	30 mm	NX-OD6256-5	NX-OD6121-5
			1 x 40-pin Fujitsu connector	30 mm	-	NX-OD6121-6
Relay digital	2 outputs, N.O., 2.0 A	Free run	Screwless push-in (NX-TBA082)	12 mm	NX-OC2633	-
output	2 outputs, N.O. + N.C., 2.0 A		Screwless push-in (NX-TBA082)	12 mm	NX-OC2733	-
	8 outputs, N.O., 2.0 A		Screwless push-in (NX-TBA082 x 2)	24 mm	NX-OC4633	-
DC Digital I/O	16 inputs + 16 outputs, 1-wire	Synchronous/free run	2 x 20-pin MIL connector	30 mm	NX-MD6256-5	NX-MD6121-5
	connection + common		2 x 24-pin Fujitsu connector	30 mm	-	NX-MD6121-6

Digital I/O performance, ON/OFF delay: High speed PNP/NPN input: 100 ns/100 ns Standard PNP/NPN input: 0.02 ms/0.4 ms

AC input: 10 ms/40 ms
High speed PNP/NPN output: 300 ns/300 ns
Standard PNP output: 0.5 ms/1.0 ms
Standard NPN output: 0.1 ms/0.8 ms
Relay output: 15 ms/15 ms

## Analog I/O

Туре	Signal type	Performance, I/O refresh method	Channels	Connection type <sup>*1</sup>	Width	Model
Analog input	4 to 20 mA	1/8,000 resolution, 250 µs/channel	2	Screwless push-in (NX-TBA082)	12 mm	NX-AD2203
	single ended	Free run	4	Screwless push-in (NX-TBA122)	12 mm	NX-AD3203
			8	Screwless push-in (NX-TBA162)	12 mm	NX-AD4203
	4 to 20 mA	1/8,000 resolution, 250 μs/channel	2	Screwless push-in (NX-TBA082)	12 mm	NX-AD2204
	differential	Free run	4	Screwless push-in (NX-TBA122)	12 mm	NX-AD3204
			8	Screwless push-in (NX-TBA162)	12 mm	NX-AD4204
		1/30,000 resolution, 10 µs/channel	2	Screwless push-in (NX-TBA082)	12 mm	NX-AD2208
		Synchronous/free run	4	Screwless push-in (NX-TBA122)	12 mm	NX-AD3208
			8	Screwless push-in (NX-TBA162)	12 mm	NX-AD4208
	±10 V	1/8,000 resolution, 250 µs/channel	2	Screwless push-in (NX-TBA082)	12 mm	NX-AD2603
	single ended	Free run	4	Screwless push-in (NX-TBA122)	12 mm	NX-AD3603
			8	Screwless push-in (NX-TBA162)	12 mm	NX-AD4603
	±10 V	1/8,000 resolution, 250 μs/channel	2	Screwless push-in (NX-TBA082)	12 mm	NX-AD2604
	differential	Free run	4	Screwless push-in (NX-TBA122)	12 mm	NX-AD3604
			8	Screwless push-in (NX-TBA162)	12 mm	NX-AD4604
		1/30,000 resolution, 10 µs/channel	2	Screwless push-in (NX-TBA082)	12 mm	NX-AD2608
		Synchronous/free run	4	Screwless push-in (NX-TBA122)	12 mm	NX-AD3608
			8	Screwless push-in (NX-TBA162)	12 mm	NX-AD4608
Analog output	4 to 20 mA	1/8,000 resolution, 250 µs/channel	2	Screwless push-in (NX-TBA082)	12 mm	NX-DA2203
		Free run	4	Screwless push-in (NX-TBA122)	12 mm	NX-DA3203
		1/30,000 resolution, 10 µs/channel	2	Screwless push-in (NX-TBA082)	12 mm	NX-DA2205
		Synchronous/free run	4	Screwless push-in (NX-TBA122)	12 mm	NX-DA3205
	±10 V	1/8,000 resolution, 250 μs/channel	2	Screwless push-in (NX-TBA082)	12 mm	NX-DA2603
		Free run	4	Screwless push-in (NX-TBA122)	12 mm	NX-DA3603
		1/30,000 resolution, 10 µs/channel	2	Screwless push-in (NX-TBA082)	12 mm	NX-DA2605
		Synchronous/free run	4	Screwless push-in (NX-TBA122)	12 mm	NX-DA3605

<sup>\*1.</sup> Units with Screwless push-in connections are supplied with the appropriate terminal connector.

<sup>&</sup>lt;sup>\*2.</sup> Units with Screwless push-in connections are supplied with the appropriate terminal connector. Units with MIL connectors are supplied without matching plugs.

Model codes are for PNP type signals (positive switching, 0 V common). Most models are also available as NPN type (negative switching, 24 V common). Inputs of MIL connector versions can be used as NPN or PNP.



#### **Temperature input**

Туре	Signal type	Performance, I/O refresh method	Channels	Connection type <sup>*1</sup>	Width	Model
Temperature	Thermocouple type	0.1°C resolution, 200 ms/unit	2		12 mm	NX-TS2101
sensor input		Free run	4		24 mm	NX-TS3101
WRe5-26/PLII	0.01°C resolution, 10 ms/unit	2	sor, calibrated individually at the	12 mm	NX-TS2102	
	Free run	4	factory	24 mm	NX-TS3102	
		0.001°C resolution, 60 ms/unit	2		12 mm	NX-TS2104
	Free run	4		24 mm	NX-TS3104	
	RTD type	0.1°C resolution, 200 ms/unit Free run	2	Screwless push-in (NX-TBA162)	12 mm	NX-TS2201
	Pt100 (3wire)/Pt1000/ Ni508.4		4	Screwless push-in (NX-TBA162 + NX-TBB162)	24 mm	NX-TS3201
		0.01°C resolution, 10 ms/unit	2	Screwless push-in (NX-TBA162)	12 mm	NX-TS2202
		Free run	4	Screwless push-in (NX-TBA162 + NX-TBB162)	24 mm	NX-TS3202
		0.001°C resolution, 60 ms/unit	2	Screwless push-in (NX-TBA162)	12 mm	NX-TS2204
	Free run	4	Screwless push-in (NX-TBA162 + NX-TBB162)	24 mm	NX-TS3204	

 $<sup>^{\</sup>star 1.}$  Units with Screwless push-in connections are supplied with the appropriate terminal connector.

#### **Heater burnout detection**

Туре	Channels, signal type	Control output	I/O refresh method	Connection type <sup>*1</sup>	Width	Model
Heater burnout detection		NPN, 12 to 24 VDC 0.1 A/point, 0.4 A/unit	Free run	Screwless push-in (NX-TBA162)	12 mm	NX-HB3101
		PNP, 24 VDC 0.1 A/point, 0.4 A/unit		Screwless push-in (NX-TBA162)	12 mm	NX-HB3201

<sup>\*1.</sup> Units with Screwless push-in connections are supplied with the appropriate terminal connector.

#### **Position interface**

Туре	Channels, signal type	I/O refresh method	Connection type <sup>*1</sup>	Width	Model	NPN type <sup>*2</sup>
Encoder input	1 SSI encoder, 2 MHz	Synchronous/free run	Screwless push-in (NX-TBA122)	12 mm	NX-ECS112	-
	2 SSI encoders, 2 MHz		Screwless push-in (NX-TBA122)	12 mm	NX-ECS212	-
	1 incremental encoder line driver 4 MHz + 3 digital inputs (1 μs)		Screwless push-in (NX-TBA122 + NX-TBB122)	24 mm	NX-EC0142	NX-EC0132
	1 incremental encoder open collector 500 kHz + 3 digital inputs (1 μs)		Screwless push-in (NX-TBA162)	12 mm	NX-EC0122	NX-EC0112
2 incremental encoders open col- lector 500 kHz		Screwless push-in (NX-TBA122)	12 mm	NX-EC0222	NX-EC0212	
Pulse output	1 pulse open collector 500 kHz + 2 digital inputs + 1 digital output	Synchronous	Screwless push-in (NX-TBA162)	12 mm	NX-PG0122	NX-PG0112
2 in	2 pulse line driver 4 MHz + 5 digital inputs per channel + 3 digital out- puts per channel		1 x 34-pin MIL connector	30 mm	NX-PG0242-5	NX-PG0232-5
	4 pulse line driver 4 MHz + 5 digital inputs per channel + 3 digital out- puts per channel		2 x 34-pin MIL connector	30 mm	NX-PG0342-5	NX-PG0332-5

<sup>\*1.</sup> Units with Screwless push-in connections are supplied with the appropriate terminal connector. Units with MIL connectors are supplied without matching plugs.

#### Load cell input

Туре	Specifications	I/O refresh method	Excitation voltage/Input range	Connection type <sup>*1</sup>	Width	Model
Load cell input	1 load cell input, 125 μs	Synchronous/free run	5 VDC ±10%/-5 to 5 mV/V	Screwless push-in (NX-TBC162)	12 mm	NX-RS1201
	conversion cycle					

<sup>\*1.</sup> Units with Screwless push-in connections are supplied with the appropriate terminal connector.

#### Safety (the NX-Safety units must be used in combination with the EtherCAT communication coupler)

Туре	Specifications	Performance, I/O refresh method	Connection type <sup>*1</sup>	Width	Model
Safety controller	FSoE protocol	For up to 1,024 safety I/O points	128 safety connections	30 mm	NX-SL3500
		For up to 256 safety I/O points	32 safety connections	30 mm	NX-SL3300
Safety input	4 inputs + 2 test outputs	Free run	Screwless push-in (NX-TBA082)	12 mm	NX-SIH400
	8 inputs + 2 test outputs		Screwless push-in (NX-TBA162)	12 mm	NX-SID800
Safety output	2 outputs, 2.0 A		Screwless push-in (NX-TBA082)	12 mm	NX-SOH200
	4 outputs, 0.5 A		Screwless push-in (NX-TBA082)	12 mm	NX-SOD400

<sup>\*1.</sup> Units with Screwless push-in connections are supplied with the appropriate terminal connector.

#### **Communication interface**

Туре	Serial interface	No. of serial ports	Connection type <sup>*1</sup>	Width	Model
Communication interface	RS-232C	1	Screwless push-in (NX-TBC162)	12 mm	NX-CIF101
		2	D-Sub 9pin connector	30 mm	NX-CIF210
	RS-422A/485	1	Screwless push-in (NX-TBC162)	12 mm	NX-CIF105

<sup>\*1.</sup> Units with Screwless push-in connections are supplied with the appropriate terminal connector.

Model codes are for PNP type signals (positive switching, 0 V common). Most models are also available as NPN type (negative switching, 24 V common). Inputs of MIL connector versions can be used as NPN or PNP.



#### Power/System

Туре	Description	Connection type <sup>*1</sup>	Width	Model
NX bus power supply unit	24 VDC input, non-isolated	Screwless push-in (NX-TBC082)	12 mm	NX-PD1000
I/O power feed unit	For separation of groups, up to 4 A	Screwless push-in (NX-TBA082)	12 mm	NX-PF0630
	For separation of groups, up to 10 A	Screwless push-in (NX-TBA082)	12 mm	NX-PF0730
I/O power supply connection unit	16 × IOV	Screwless push-in (NX-TBA162)	12 mm	NX-PC0020
	16 × IOG	Screwless push-in (NX-TBA162)	12 mm	NX-PC0010
	$8 \times IOV + 8 \times IOG$	Screwless push-in (NX-TBA162)	12 mm	NX-PC0030
Shield connection unit	Grounding terminal, 16 points	Screwless push-in (NX-TBC162)	12 mm	NX-TBX01

<sup>\*1.</sup> Units with Screwless push-in connections are supplied with the appropriate terminal connector.

#### Recommended EtherCAT and EtherNet/IP communication cables

Refer to "Recommended EtherCAT and EtherNet/IP communication cables" in the NJ-series machine controller datasheet Cat. No. I180E-EN (www.industrial.omron.eu/en/products/downloads) for the recommended cables.

#### **Accessories**

Specifications			Model	Appearance
EtherCAT junction slaves	3 ports Power supply voltage: 20.4 to 28.8 VDC (2 Current consumption: 0.08 A	24 VDC –15 to 20%)	GX-JC03	
	6 ports Power supply voltage: 20.4 to 28.8 VDC (2 Current consumption: 0.17 A	GX-JC06	1000	
Industrial switching hubs (for EtherNet/IP and	Quality of Service (QoS): EtherNet/IP control data priority.	3 ports Power supply connector included	W4S1-03B	
	Failure detection: Broadcast storm and LSI error detection	5 ports Power supply connector included	W4S1-05B	
	10/100 BASE-TX, Auto-Negotiation Current consumption: 0.22 A	5 ports Power supply connector and connector for informing error included	W4S1-05C	
SD memory card	2 GB	HMC-SD291	onnon A HMC-SD291	
	4 GB		HMC-SD491	2GB
DIN track	Length: 0.5 m; height: 7.3 mm	PFP-50N	_	
	Length: 1 m; height: 7.3 mm	PFP-100N		
	Length: 1 m; height: 16 mm	PFP-100N2		
End plate to secure the uni	its on the DIN rail		PFP-M (2 pcs)	05
Battery for NX/NJ CPU uni	t		CJ1W-BAT01	
End cover	End cover for NX1 CPU unit (Provided with the CPU unit)		NX-END02	
	End cover for EtherCAT communication co (Provided with the EtherCAT communication	NX-END01		

## **Computer software**

Specifications	Model
Sysmac Studio Lite Edition 1 version 1.17 or higher	SYSMAC-LE

<sup>\*1.</sup> Same functionality and supported devices than Sysmac Studio Standard Edition except for controller. The Lite Edition only supports the NJ1 and NX1 machine controllers.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Cat. No. SysCat\_I179E-EN-01B In the interest of product improvement, specifications are subject to change without notice.

<sup>\*2.</sup> Refer to the Sysmac Studio datasheet (Cat. No. SysCat\_I181E) for detailed information or contact your OMRON representative.